



## Holder+Clip (Keep for reuse)

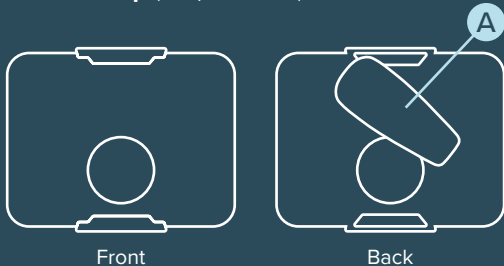

Front

Back

## Blister Pack (Send back for processing)

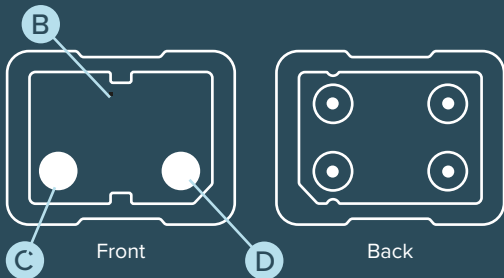

Front

Back

## Genesis Ultra TLD-BP Dosimeter

A lightweight, eco-friendly, two-part TLD badge that includes:

1. A reusable holder/clip (back of the badge; includes the clip) that you keep.
2. A completely sealed, single-use plastic **blister pack** (front of the badge; securely houses the detector technologies) that you return for processing.

The Genesis Ultra TLD-BP (blister pack) dosimeter's lightweight, low profile, sealed plastic design\* **reduces shipping costs**, **minimizes 'catch' risks** (of badge catching on clothing/jewelry/equipment), **improves protection** of internal parts, **increases quality**, and **decreases processing time**.

**A** Clip

**C** Mylar bubble


**B** Label

**D** Teflon bubble


## Assembly

Insert new blister pack for next wear period.

- 1 Place the lower part of the clear plastic Blister Pack into the black holder.

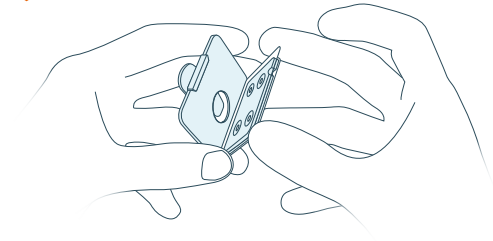


- 2 Press the top of the Blister Pack towards the holder until it snaps into place.

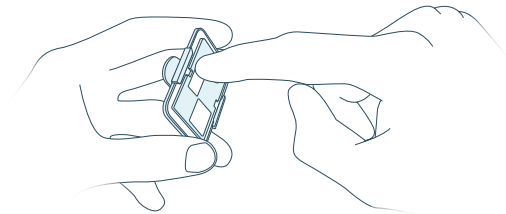


## Disassembly

Remove old Blister Pack (end of wear period) for processing.

- 1 Remove the Blister Pack by turning the clip (on the back of the holder) to expose the hole then pressing through with your finger.

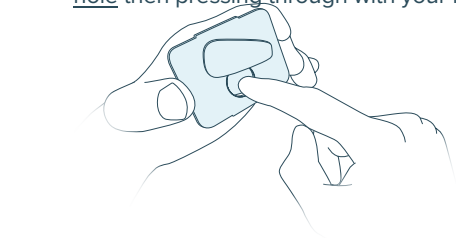

- 2 **Keep the black holder** and return the plastic Blister Pack for processing.

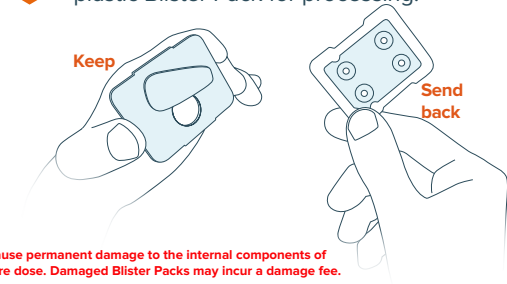

**\*WARNING:** Piercing, opening, tearing, or cutting the blister pack may cause permanent damage to the internal components of your dosimeter—rendering it unable to accurately and effectively measure dose. Damaged Blister Packs may incur a damage fee.